


\*每一款槍型基本配備不同依實際出貨為主。圖片僅供參考。  
The components/accessories for each model may have kind of differences depending on the actual goods. Images are only for reference.

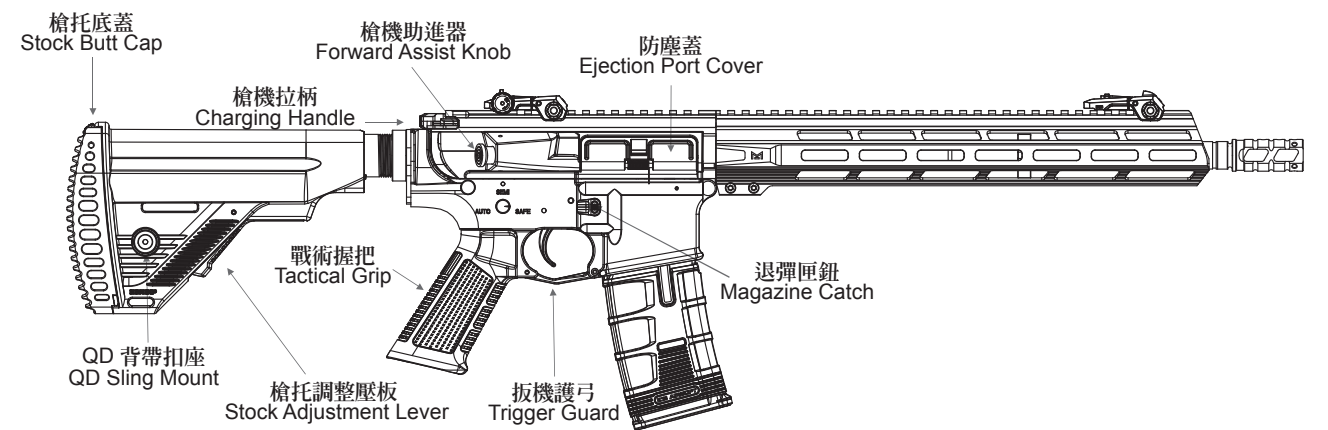

**ICS** BE A GAME CHANGER  
**ICS AIRSOFT**




### 3 可動部的說明 Movable Parts

#### 3-1 槍身結合3號齒正確位置圖 The correct position of sector gear before reassembling

**注意** 未進行歸位校正，會損壞活塞及齒輪

※The piston and gear may be damaged without correcting the position in advance.

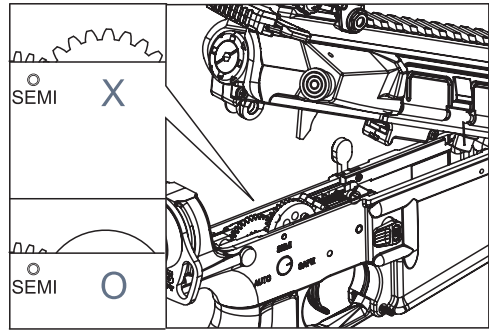


3號齒在槍身結合時，必須轉到正確位置，才可將上槍身蓋下。

Make sure the sector gear is turned to the correct position before reassembling the receiver/gearbox.

### 4 精確射擊調整動作 Precision Targeting Adjustment


#### 4-1 準星覘孔調整方式 Front and Rear Sight Adjustment

##### A: 開合準星覘孔 Rear and Front sights usage

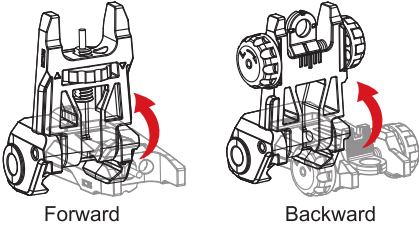


準星覘孔立起或收合皆可瞄準  
You can aim with the Front and Rear sight either raised or folded.

##### B: 覘孔調整方式 Rear sight adjustment

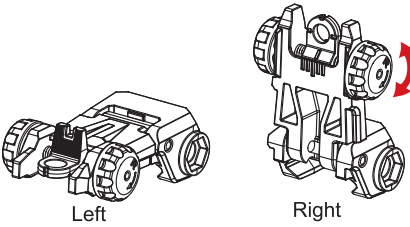


依旋鈕方向旋轉即可將覘孔組左右調整  
Rotate clockwise to aim right.  
Rotate counter clockwise to aim left.

##### C: 準星高度調整 Front sight adjustment

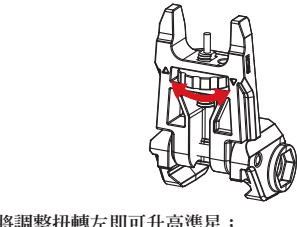

將調整扭轉左即可升高準星；  
將調整扭轉右即可降低準星。  
Rotate the dial counterclockwise to raise the aiming point.  
Rotate clockwise to lower the aiming point.

#### 4-2 選擇射擊模式 Shooting Mode Setting

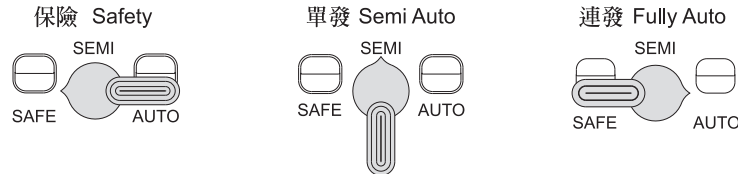


※此系列產品具備「關保險自動釋放彈簧功能」。

- 槍上有彈匣的情況下，關保險會自動釋放彈簧，有機率造成第一發雙彈射出或者小使彈，屬正常情況。
- 槍枝使用完畢，請轉至單發模式下，擊發2~3下後做清槍動作，再關保險確保槍管內已無殘彈。
- 上下槍身分解前，務必先關保險釋放彈簧，避免造成齒輪倒轉損壞活塞。

※關保險自動釋放，可延長彈簧壽命，避免長期擠壓造成疲乏

### 5 H-UP 彈道調整 H-UP Adjustment

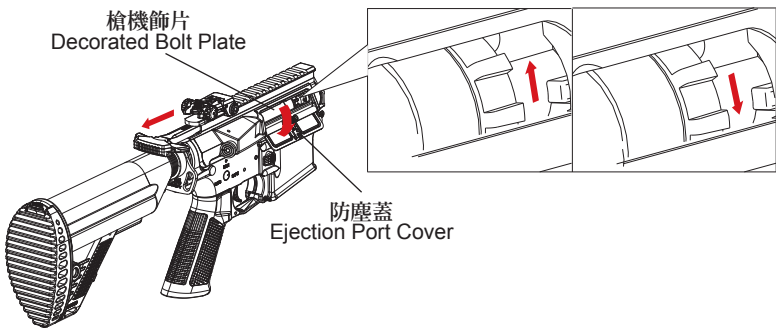

- 將槍機拉柄往後拉(不可放開)，防塵蓋上翻、槍機飾片向後打開，即可進行彈道調整。
- 視彈道進行撥盤調整，調整完即可放開槍機拉柄。

- To adjust the trajectory, pull and hold the charging handle to the end (do not release) to open the ejection port cover downward, and open the decorated bolt plate backward.
- Rotate the dial to adjust the trajectory. Release the charging handle once you finished the adjustment.


#### 3-2 快拆尾頂桿 QD Spring Guide

- 使用4mm六角板手，對準尾頂桿往內推入後旋轉45度
- 將尾頂桿與彈簧抽出

※安裝彈簧後依照步驟1倒序組裝


- Use 4mm Allen key, insert it to the spring guide and then press down to turn 45 degrees.
- Take out the spring guide and spring.

※ Reverse the above steps to install spring.

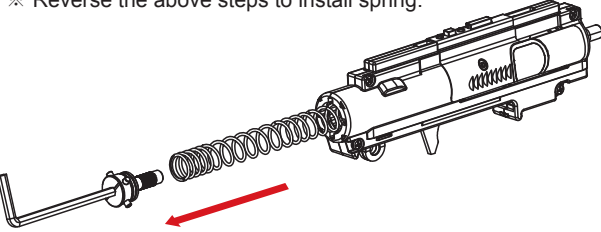

### 6 電池及護木的拆裝方法 Disassembling for Battery and Handguard

#### 6-1 護木拆裝方式 Disassembling the handguard

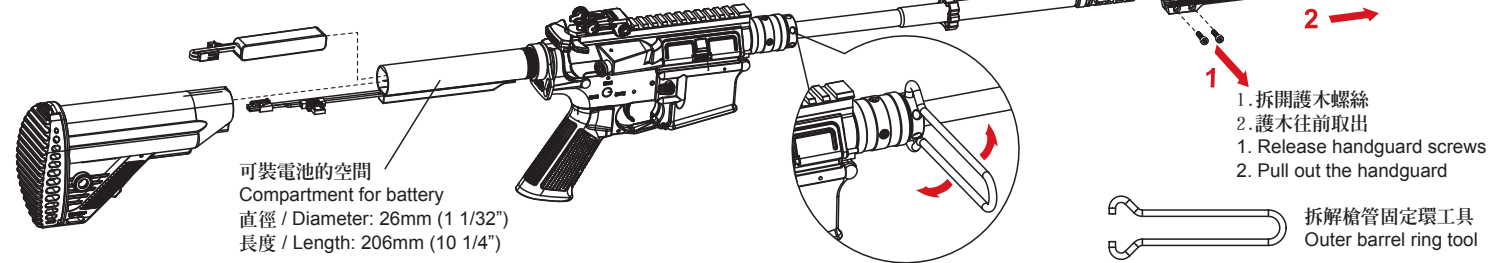

可裝電池的空間  
Compartment for battery  
直徑 / Diameter: 26mm (1 1/32")  
長度 / Length: 206mm (10 1/4")

- 拆開護木螺絲
- 護木往前取出


- Release handguard screws
- Pull out the handguard

拆解槍管固定環工具  
Outer barrel ring tool

#### 6-2 電池裝卸方式 Loading the battery


##### A: MTR 托 MTR Stock

將槍托調整桿往下拉並轉向側邊，向後取下槍托，方便安裝電池。  
Pull the stock adjustment lever downward and turn it to aside. The battery can be loaded with ease after you remove the stock backward.

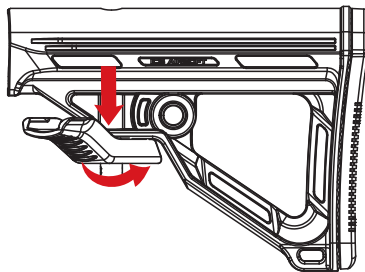


##### B: MTR S1 托 MTR S1 Stock

按下壓鈕即可分離槍托底蓋，方便安裝電池。  
Press the button on the top of the stock to remove the butt cap and for easy battery installation.

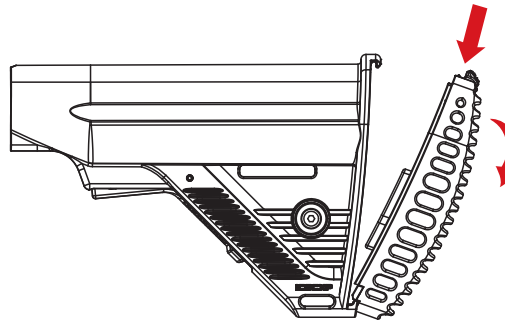

##### C: UKSR 托 UKSR Stock


用硬幣即可輕鬆解鎖取下槍托底蓋，方便安裝電池。  
You can unscrew and remove the stock butt cap with a coin easily for easy battery installation.

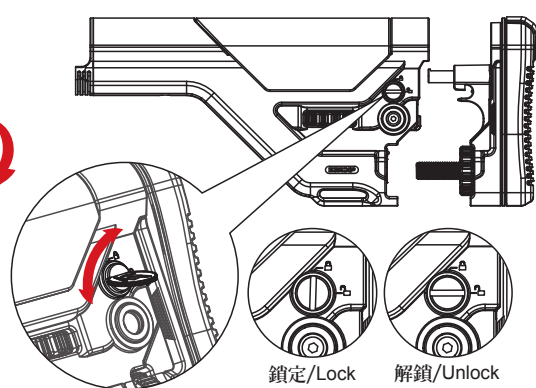

鎖定/Lock 解鎖/Unlock

### 7 齒輪箱拆解 Disassemble Gearbox


1

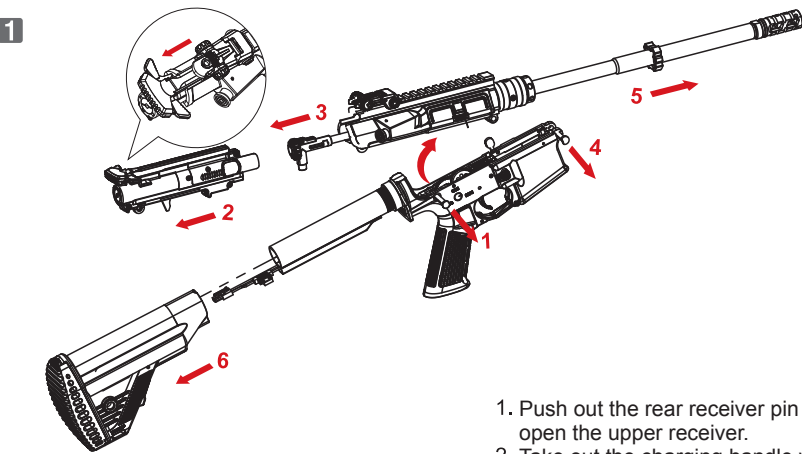

- 先將槍身後結合銷推出即可打開上槍身
- 拉柄連同上齒輪箱一同取出
- 取出H-UP組
- 再將槍身前結合銷推出
- 取出上槍身
- 將槍托調整桿向後按壓後取出槍托

- Push out the rear receiver pin to open the upper receiver.
- Take out the charging handle with upper gearbox together.
- Take out the H-UP set.
- Push out the front receiver pin.
- Separate the upper receiver.
- Push the stock release lever then pull out the stock.


2

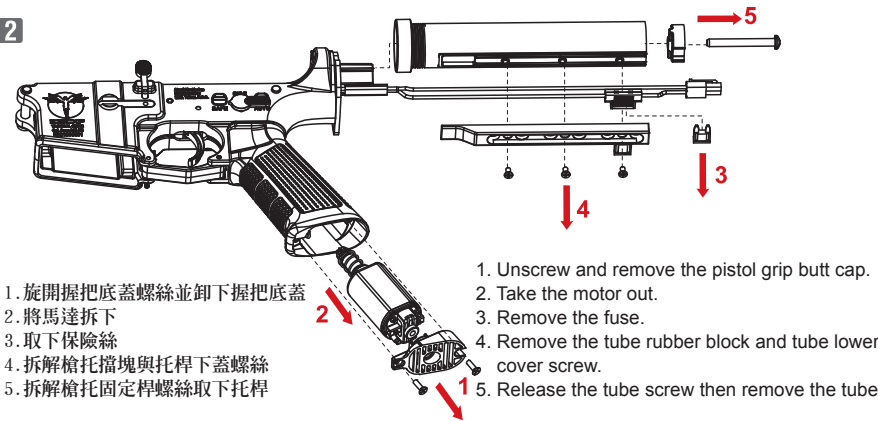

- 旋開握把底蓋螺絲並卸下握把底蓋
- 將馬達拆下
- 取下保險絲
- 拆解槍托擋塊與托桿下蓋螺絲
- 拆解槍托固定桿螺絲取下托桿

- Unscrew and remove the pistol grip butt cap.
- Take the motor out.
- Remove the fuse.
- Remove the tube rubber block and tube lower cover screw.
- Release the tube screw then remove the tube.


3

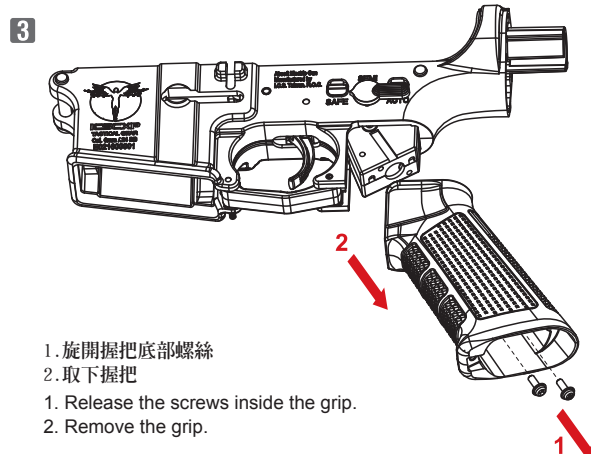

- 旋開握把底部螺絲
- 取下握把

- Release the screws inside the grip.
- Remove the grip.

4

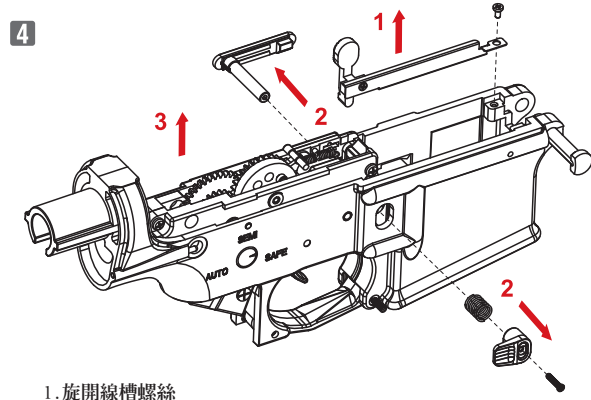

- 旋開線槽螺絲
- 旋開彈匣卡榫螺絲並取下
- 將下齒輪箱取出

- Release the crew on wire guard assembly.
- Remove the screw on the magazine catch button.
- Take out the lower gearbox.