


8

各部零件説明 Description

■ ICS-212S3

*每一款槍型基本配備不同依實際出貨為主。圖片僅供參考。
The components/accessories for each model may have kind of differences depending on the actual goods. Images are only for reference.

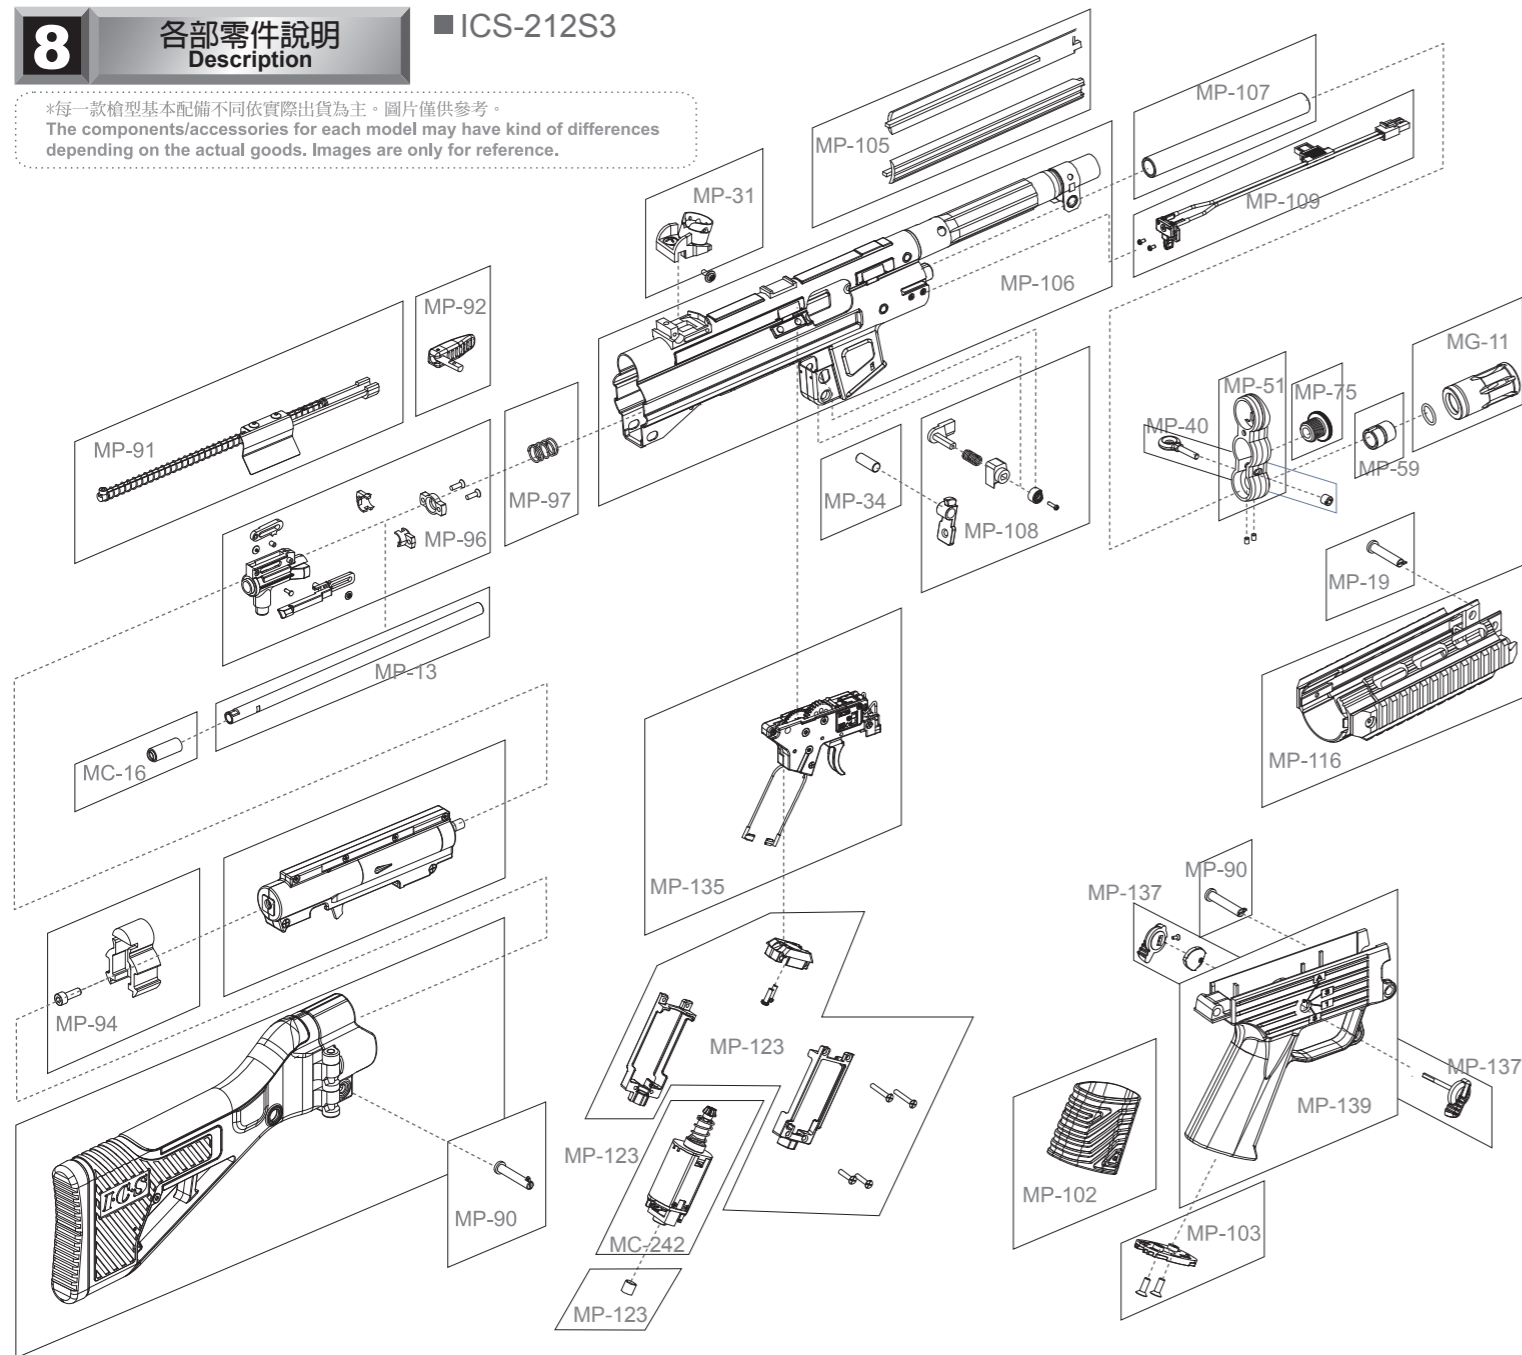

Patents acquired: R.O.C. 482292 / R.O.C. M320468 / R.O.C. D137321 / R.O.C. D168401 / R.O.C. I353869 / USD745611S / US7971583B2 / EM002527531-0001




WARNING 警告

電槍使用之注意事項 Maintenance


1. 請使用劣質或回收BB彈，以減少槍管損耗及避免卡彈。
2. 一旦發生卡彈或射擊速度降低時，應立即停止射擊，以避免造成過度消耗。請使用通條將殘彈清除，或換裝新電池電量後方可繼續使用。
3. 不在使用本產品時，請務必將射擊選擇桿置於保險(S)的位置上，並將電池移除並定期使用通條清潔槍管。
4. 請依原廠附帶之保險絲規格使用。不當配置可能導致零件損壞。槍內配置M100彈簧請用20A保險絲，M120彈簧請用25A保險絲。
5. 彈頭直徑6mm。其槍口動能為二焦耳以下、射程範圍為50公尺以內。
6. 適用年齡為十六歲以上，未成年人士使用時需有成年人在場監護。
7. 使用本商品不得改造或製造，並不得使用金屬彈頭。
8. 「此槍非玩具」，濫用可能造成嚴重傷害，尤其是眼睛。使用時應確保本槍及射程範圍內所有人員均已確實穿戴防護目鏡。
9. 使用方法或注意事項請詳閱說明書內容。

1. To reduce the abrasion of inner barrel and to avoid jam, please do not use inferior or reused BB pellets.
2. If your gun is jammed or the muzzle velocity has decreased, please stop shooting immediately in case the gear abrasion excessively. Use the clearing rod to clear out the remaining pellets. Check your battery power before continue using your gun.
3. Please engage the safety, dismount the battery and clear the inner barrel with the clearing rod periodically when not using this product.
4. Please use the fuse with the specification according to the original one. Equipping improper fuse might cause malfunction to the components. If your gun is applied with a M100 spring, please use 20A fuse. If applied with a M120 spring, please use 25A fuse.
5. The diameter of the BB pellet is 6mm. Its muzzle energy is less than two joules, and the shooting range is within 50 meters.
6. The suitable age to operate is 16 and above. Adults must supervise at aside while juveniles operate the product.
7. Modify, reform, and use of metal bullets on this product are strictly forbidden.
8. This is NOT a toy. Abusing might cause severe injuries, especially to the eyes. Before operating, please make sure that every person in the shooting range have worn eye protection properly, including the operator himself.

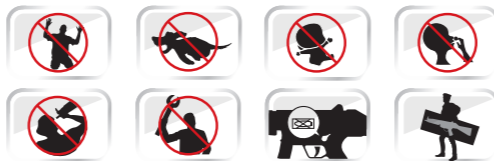

1

各部名稱

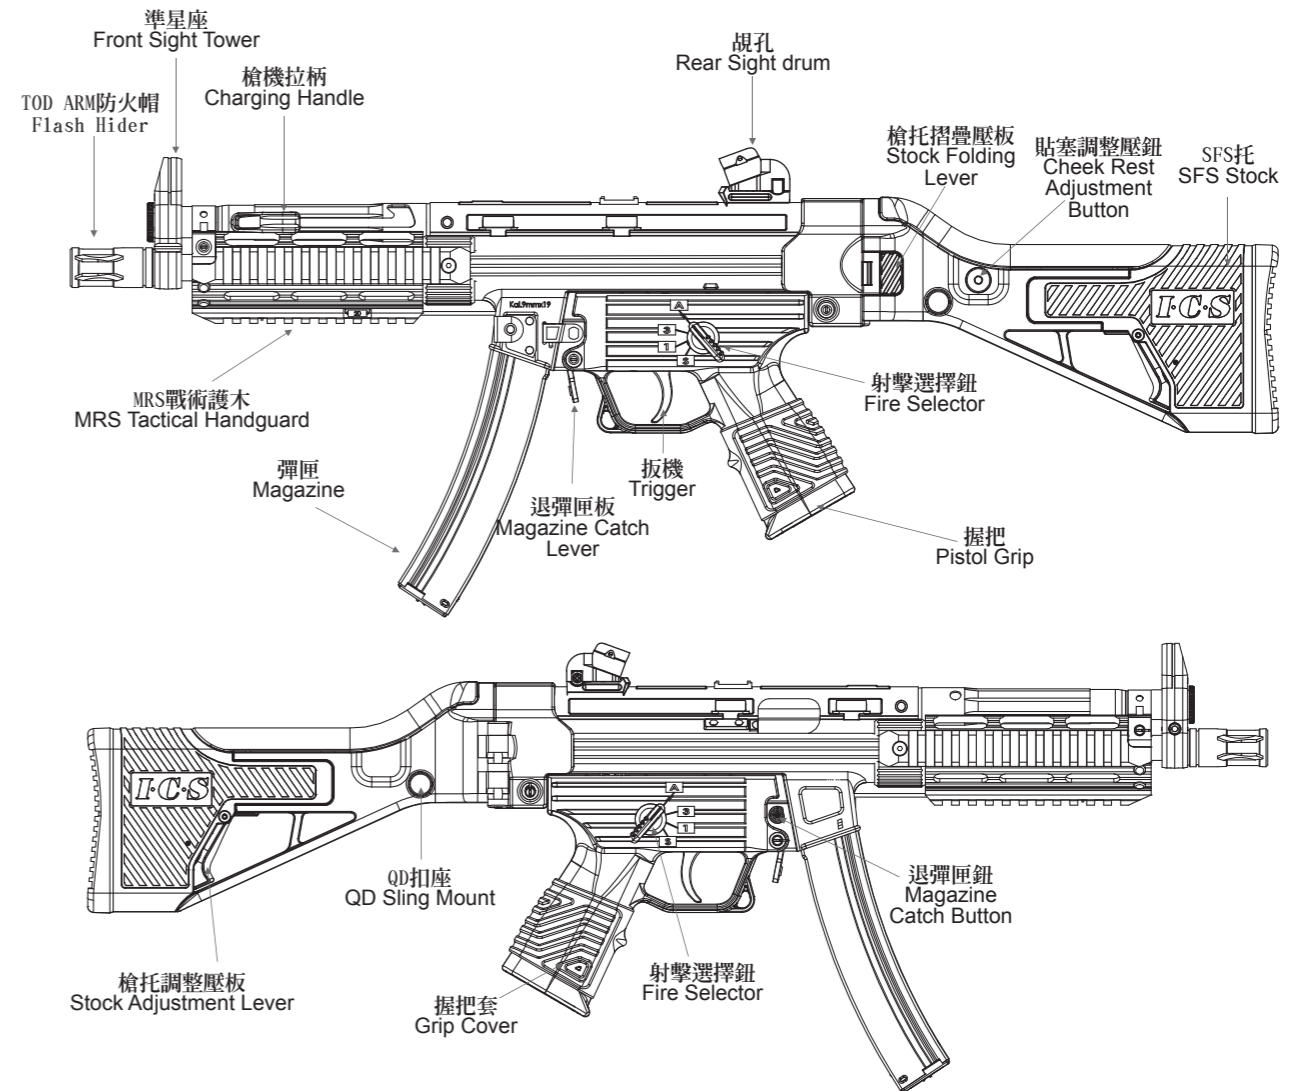

相關系列產品型號與詳細規格，請以官方網站公布為主。
For related series product models and detailed specifications, please refer to the official website.

2

彈匣使用方式 Magazine Attachment


2-1

装BB弾方式 Load BBs

將彈匣上蓋依箭頭方向打開再倒入BB彈。
Open the cover to load BBs.

建議使用 6mm BB彈。
6mm caliber BBs are
recommended for
optimum performance.


依箭頭方向旋緊彈匣底下旋鈕，
即可將BB彈順利送出。
To charge BB feed spring, please
rotate the gear under the magazine.

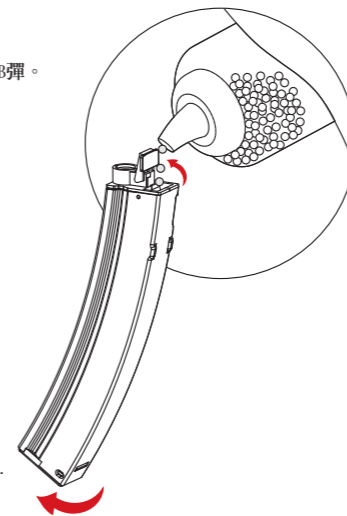

2-2

2 裝卸彈匣 Magazine Loading and Unloading


1. 直接將彈匣插入彈匣插槽。
 2. 按壓退彈匣鉗或退彈匣板即可將彈匣卸下。
1. Load the magazine directly into the magazine slot.
2. Press the magazine catch to unload the magazine.

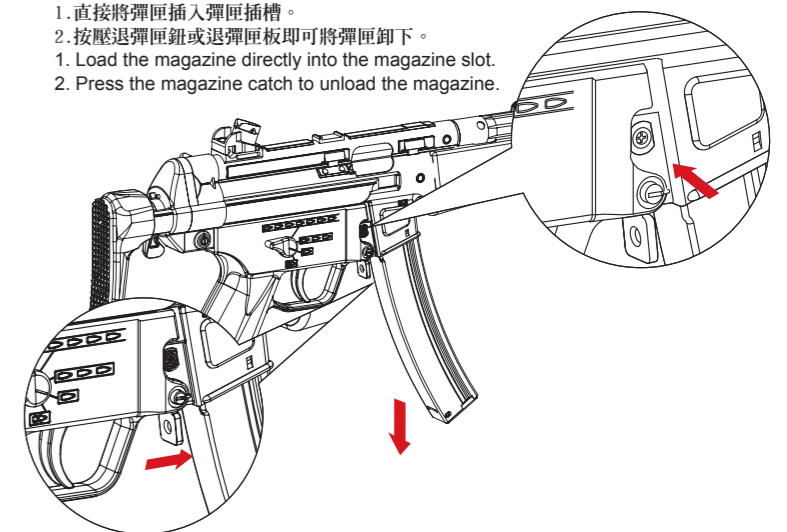

3 可動部的說明 Movable Parts


3-1 槍機拉柄操作 Charging Handle

- 1 將槍機拉柄向後拉至底端(不可放開)
Pull the charging handle back to the end of the groove.
- 2 將槍機拉柄向上扳即可固定在後
Push the charging handle upward hold backward.

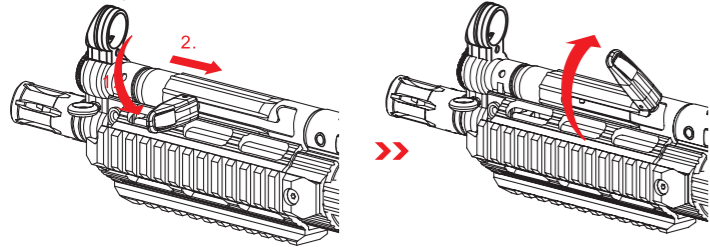


3-3 伸縮托調整 Retractable Stock Adjustment

將伸縮托調整桿向外撥，伸縮托即可前後調整。
Push the Stock Adjustment Lever to your left and hold to extend or shorten the stock.

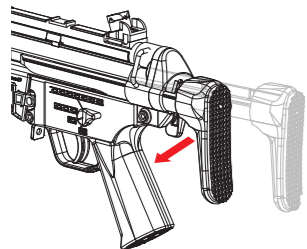

3-5 釋放彈簧 Spring tension release

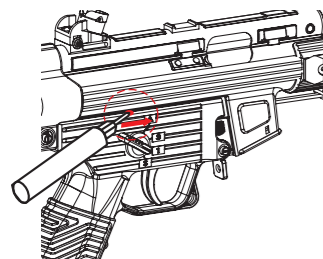

※操作前請先確保槍管內無BB彈，並切至保險模式。
使用工具將止逆爪連桿向前推，將彈簧壓力釋放，可延長彈簧壽命，避免長期擠壓造成疲乏。


※Before operation, turn into the safety mode and ensure that there is no BB's in the inner barrel. The spring tension release mechanism can extend the spring lifetime by avoiding spring fatigued from long time compression

1. 槍上有彈匣的情況下釋放彈簧，有機會造成第一發雙彈射出或者小使彈，屬正常情況。
2. 上下槍身分解前，務必先釋放彈簧，避免造成齒輪倒轉損壞活塞。

1. Having a magazine loaded, it is a normal condition that the gun might shoot a double shot, or a weak shot after turning it to safety and releasing the tension stored in the spring.
2. Before opening the upper and lower receivers, always release the spring tension to safety position, this will avoid spring damage from sudden release from the sector gear.

3-4 SFS托調整 SFS Stock Adjustment


- 1 按壓槍托調整壓鈕後，即可前後調整長度。
Press the Stock Adjustment Lever to adjust the length.
- 2 按壓貼塞調整鈕後，即可上下調整高度。
Press the Cheek Rest Adjustment Button to adjust the height.
- 3 按壓摺疊鈕後，即可依逆時針將槍托摺疊。
Press the Stock Folding Lever to fold the stock counterclockwise.

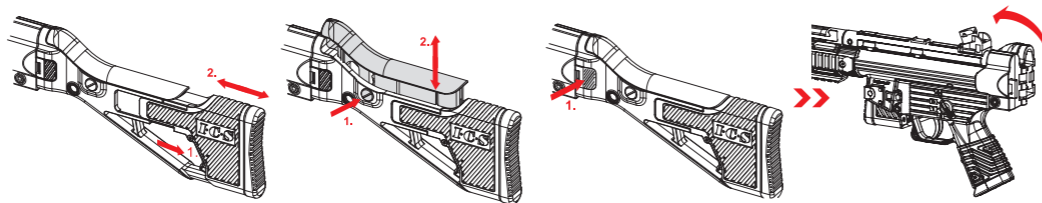


4 精確射擊調整動作 Precision Targeting Adjustment

4-1 覘孔調整 Rear Sight Adjustment

- 1 使用十字起子，將固定螺絲旋開。
Use cross screwdriver loosen the rear sight fixing screw.
- 2 視需要，使用十字起子調整螺絲使覘孔左右移動。
Use cross screwdriver adjusting screw to adjust the sight towards left or right per your demand.
- 3 旋轉覘孔調整覘孔高度。
Rotate the sight drum to adjust the height of the sight.
- 4 調整完畢後再將螺絲鎖緊。
Screw the fixing screw to fix after you finish adjusting.

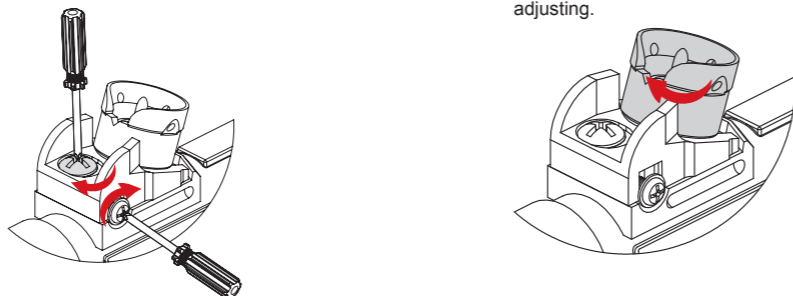

4-2 選擇射擊模式 Shooting Mode Setting

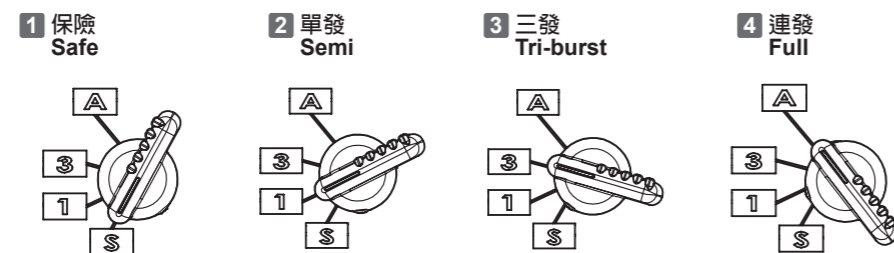


槍枝使用完畢，請轉至單發模式下，擊發2~3下後做清槍動作，再關保險確保槍管內已無殘彈。

After finishing playing, fire the gun 2-3 times in semi auto to clear the remaining BBs inside the hop-up chamber, then switch the selector lever to safety to ensure there is no BB left inside.

3-2 槍身結合3號齒輪箱正確位置圖 The correct position of sector gear before reassembling


注意
CAUTION 未進行歸位校正，會損壞活塞及齒輪

※The piston and gear may be damaged without correcting the position in advance.

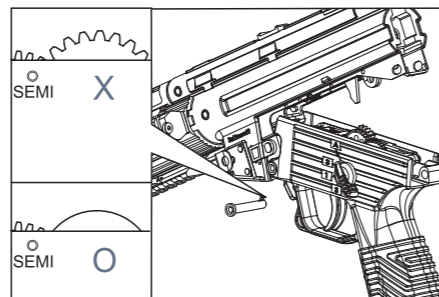

3號齒在槍身結合時，必須轉到正確位置，才可將上槍身蓋下。
Make sure the sector gear is turned to the correct position before reassembling the receiver.

5 H-UP 彈道調整 H-UP Adjustment

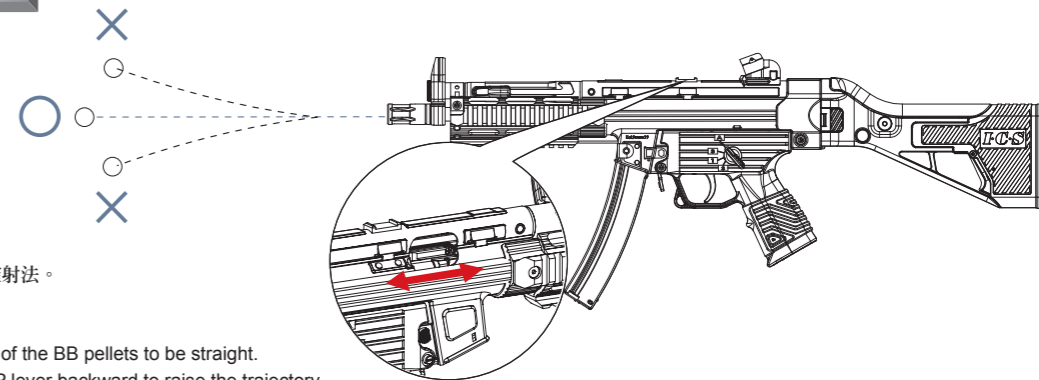

H-UP調整：BB彈呈現一直線的彈道才是正確射法。

過於上飄：將撥片往後拉。

過於下墜：將撥片往前推。

H-up Adjustment: Make sure the trajectory of the BB pellets to be straight.

When the BB pellet flies up: Push the H-UP lever backward to raise the trajectory.

When the BB pellet falls down: Push the H-UP lever forward to lower the trajectory.


6 電池的拆裝方法 Battery Installation and Disassembly

注意
CAUTION 重新組裝時，必須依反向動做組合


※Reassembling is the reverse of disassembling procedures.

1. 將護木固定銷取出。
2. 將護木向前取下。

- 1.Remove the handguard pin.
- 2.Push the handguard forward to remove.

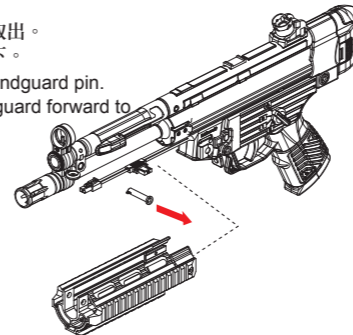


3. 將電池接好後，再依反序將護木裝回。
- 3.Reassemble the battery once you plugged in the battery.

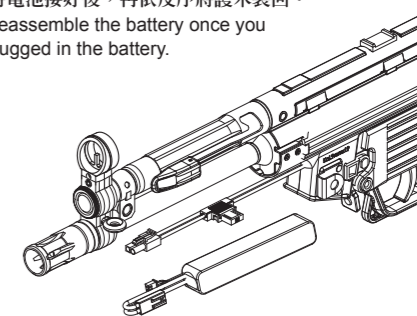

7 齒輪箱拆解 Disassemble Gearbox

注意
CAUTION 先卸彈匣跟電池，再進行拆解


※Unload the magazine and battery before you proceed to disassemble.

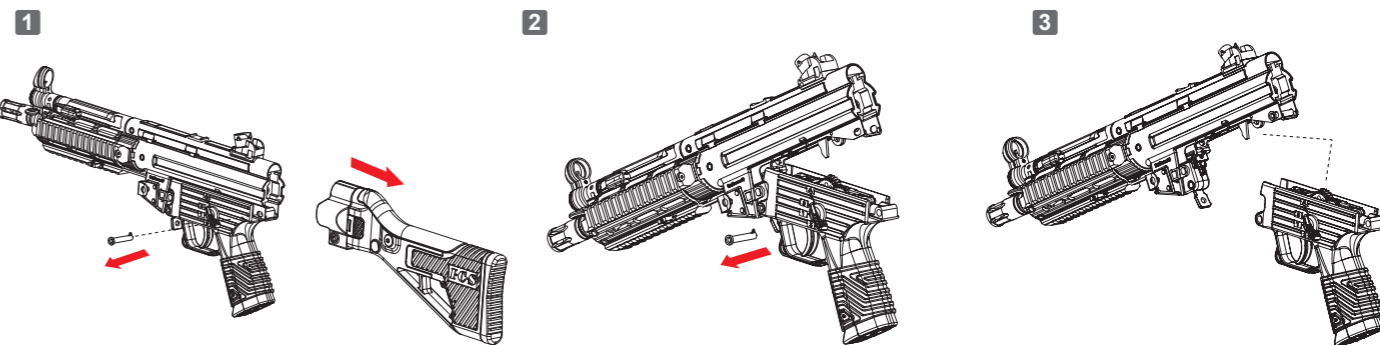

將後槍身結合銷取下後，再將槍托向後取下
Remove the stock by pulling out the rear receiver pin.

將前槍身結合銷取下
Pull out the front receiver pin.

將上下槍身分離(注意上齒輪箱彈出)
Separate the upper and lower receiver. (The upper gerabox might popped out)

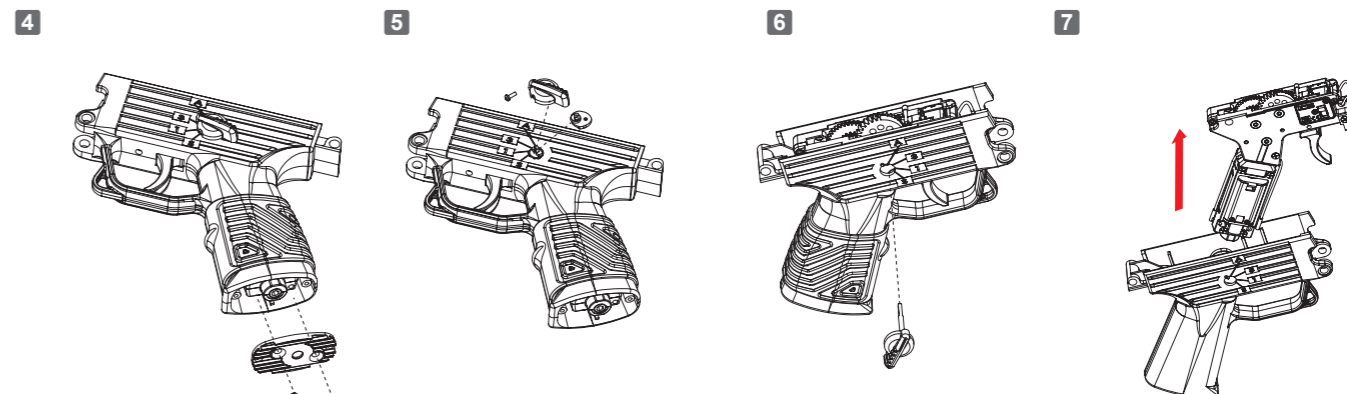

旋開握把底蓋螺絲，將握把底蓋卸下
Unscrew the Pistol Grip End Cap to remove.

旋開選擇鈕螺絲再把選擇鈕卸下
Unscrew the Fire Selector to remove.

翻轉至另一側將選擇鈕卸下
Disassemble the Fire Selector on the opposite side.

向上將下齒輪箱取出。
Pull up the lower gearbox to detach.